

TROUGH LIGHT

JOINING INSTRUCTIONS



Components

If your trough light is in more than one section, you will need to join the sections together after installing the light. **NOTE:** When installing the light, ensure you keep the bracket fixing bolts loose to ensure you can slide the light apart.


In addition to your trough light you will have received the following parts:



2 x metal joining pins



1 x metal joining strip

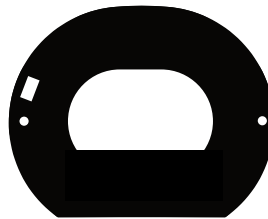


1 x plastic gasket

Instructions

To join the light, push the jointing pins halfway into the pin slots as per the diagram below.

Push the joining plate halfway into the plate slot as per the diagram below. Ensure the plate is the correct way round for tightening the screws. Using an hex key, tighten two of the screws against the light.

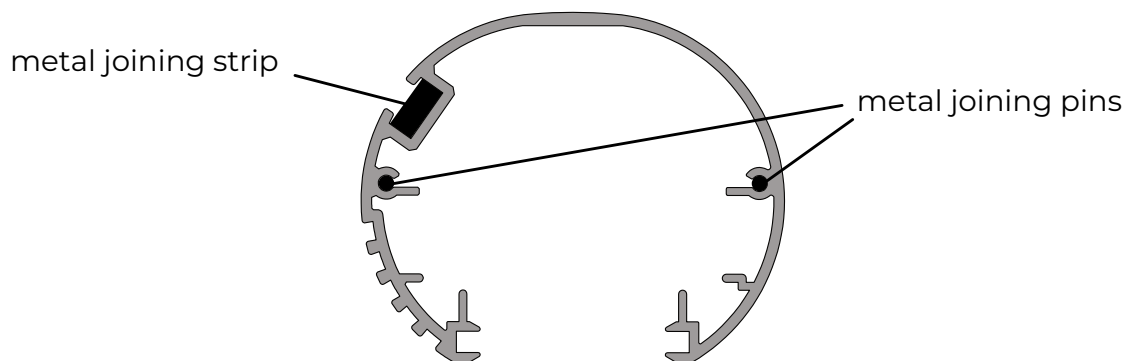

Place the plastic gasket on to the end of the light, the holes will align with the joining pins and joining strip.

Plug the two wires together before aligning the other part of the light.

Tighten the remaining 2 screws in the joining strip to complete the process.

Always consult a qualified electrician to complete wiring the trough light to a power supply.